
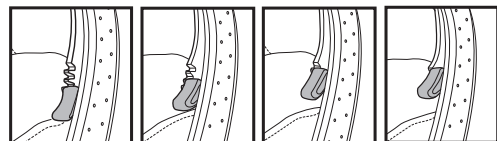



シールドの調節の仕方

プリセットレバーの位置はポジション0～3まで4段階あり、ポジション0はシールド取り外し・取り付け用のポジション、ポジション1～3はシールド下端位置調整用のポジションです。プリセットレバーをポジション1～3にすることで、右図のようにシールド下端の位置を調整できます。


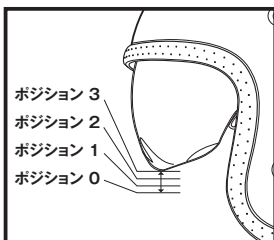


ポジション0 ポジション1 ポジション2 ポジション3


プリセットレバーの高さを変えるには、まずシールドを上げ、プリセットレバーを外側に押し開いてからギアに合わせて上下してください。プリセットレバーの高さを変えるときは、左右を同じポジションに調節してご使用ください。

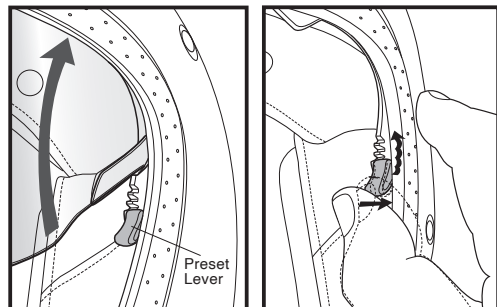

CJ-3 シールドの取り外し方

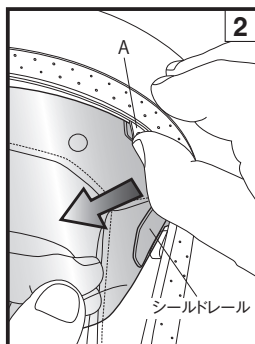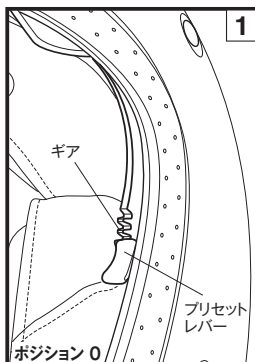




シールドを上げ、左右のプリセットレバーをポジション1より一段階下の位置(一番下のギアからさらに下に下げた位置)ポジション0まで下げます(図1)。シールドを下ろし、シールドレールのツマAを持ち上げ、シールドレールのツマAをはずし(図2)、手前にシールドを引き抜きます(図3)。(ツマAを持ち上げにくい場合、布を巻き付けたマイナスドライバーなどを差し込み持ち上げ、ホックを外します。その際はシールドを傷つけないよう注意してください。)

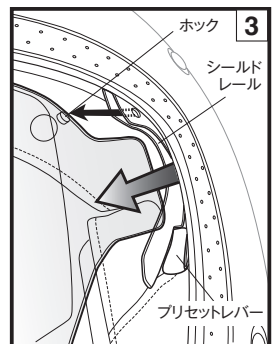


シールド調節機構のプリセットレバーを、ポジション0(一番下のギアからさらに下に下げた位置)にしたまま保管しないでください。プリセットレバーが変形する恐れがあります。

CJ-3シールドの取り付け方

左右のプリセットレバーをポジション0まで下げます(図4)。シールドをシールドレールに差し込みながら、Aの穴にシールドレールのツマAをはめ込みます(図5)。シールド装着後、シールドを上げ、プリセットレバーはポジション1～3のいずれかに調節してからご使用ください。

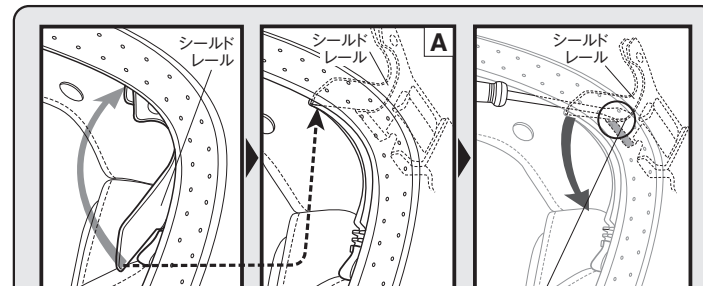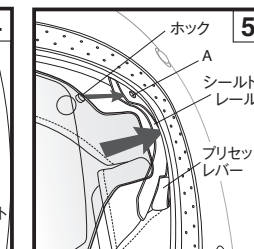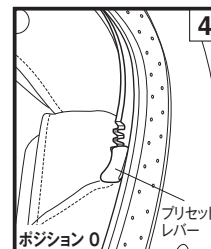

シールドレールが帽体とライナーの隙間(シールドの収納スペース)に入り込んだ場合(図Aのような状態の時)は、シールドレールのシールドが収まる部分に布を巻き付けたマイナスドライバーなどを差し込み引っ掛けて下ろします。

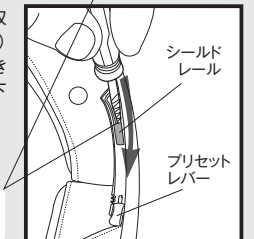

シールドレールのシールドが収まる部分

CJ-3 シールドの取り扱いに関するご注意



1. シールドが雨などで濡れた場合は、シールドを外し、よく水分をとってからヘルメットに装着して保管してください。
2. シールドの汚れや傷は走行中の視界の妨げとなり、大変危険です。シールドが汚れたり傷が付いたら、直ちに使用を中止し、取り外して洗浄するか、交換してください。ミラー加工されたシールドは、ご使用状況によってコーティングが剥がれやすくなる場合があります。お手入れの際は真水のみで優しく洗浄してください。
3. シールドは、水で薄めた中性洗剤で洗い、真水でよくすすいでから柔らかい布でふき取り、乾かしてください。40℃を超える

湯・塩水・酸性またはアルカリ性の洗剤・ベンジン・シンナー・ガソリン・その他の有機溶剤・ガラスクリーナー等、有機溶剤を含むクリーナー類は使用しないでください。これらが付着すると、シールドが変質し、安全性に支障をきたす可能性があります。

4. シールドが曇った状態で走行しないでください。視界が妨げられ大変危険です。シールドが曇った場合、シールドを開けてヘルメット内をよく換気してください。
5. シールドの視界に入る位置に、ステッカーや粘着テープを貼らないでください。


Shield / Visor Adjustment Mechanism

Preset lever can be adjusted in 4 steps, from Position 0 to 3. Position 0 is for removing and installing the shield/visor, and Position 1, 2, and 3 are for adjusting the position of the bottom end of the shield/visor as per drawing on the right.

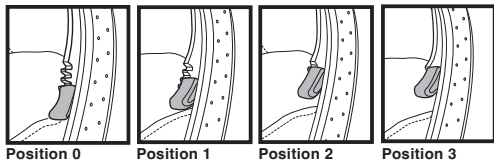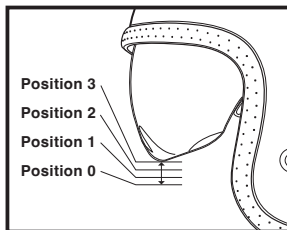


For changing height of the preset lever, open a shield/visor, push the preset lever to outside slightly and move it to the gear of the required position.



When adjusting the position of the preset lever, make sure to adjust the both sides to the same position.

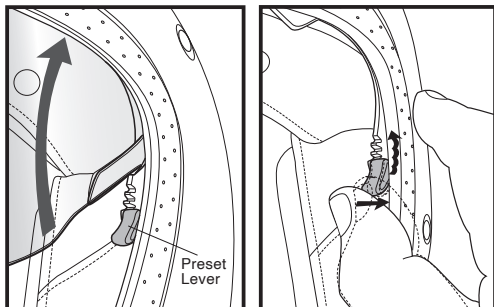

Removing the CJ-3 Shield / Visor

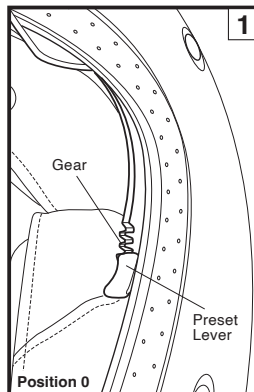




Open a shield/visor, and move preset levers of both sides to the position 1 (under the lowest gear) as per Drawing 1. Close the shield/visor, lift the catch A slightly and unclasp the hook as per Drawing 2. Draw the shield/visor out from the shield/visor rail as per Drawing 3. (When lifting the catch by hand is difficult, use a flat tool such as a flat-head screwdriver covered with soft cloth not to scratch a shield/visor.)

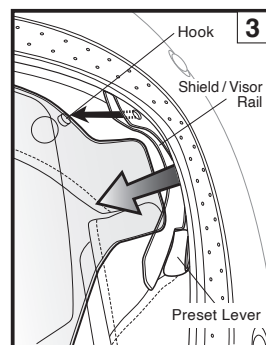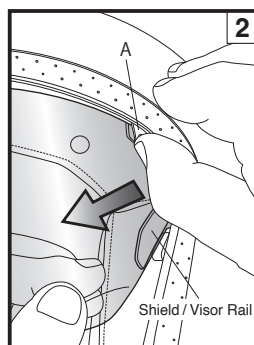

! Do not leave the preset lever in the position 0 (the lower position than the position 1). The lever may be deformed.

Installing the CJ-3 Shield / Visor

Adjust preset levers of both sides to the position 0 as per Drawing 4. Insert the shield/visor to the shield/visor rail, and fix the hook to the hole on A as per Drawing 5. After a shield/visor is installed, open a shield/visor and adjust preset levers of both sides to position 1, 2, or 3.

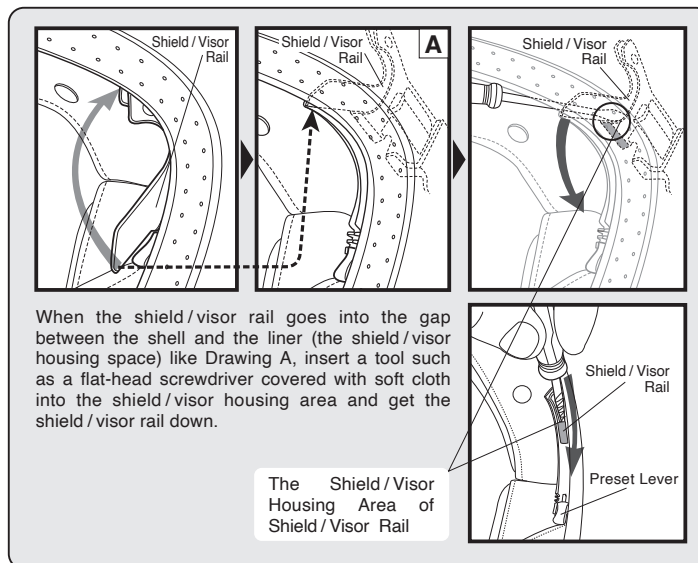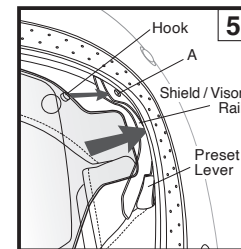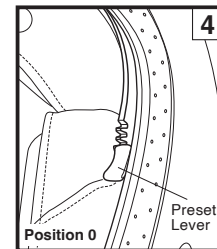

When the shield/visor rail goes into the gap between the shell and the liner (the shield/visor housing space) like Drawing A, insert a tool such as a flat-head screwdriver covered with soft cloth into the shield/visor housing area and get the shield/visor rail down.

The Shield / Visor Housing Area of Shield / Visor Rail

Important Notice about Handling the CJ-3 Shield / Visor

1. When the shield/visor gets wet, remove the shield/visor. Dry it well and fix to the helmet.
2. Dirt and scratches on the shield/visor may obstruct your view while riding and can be very dangerous! If the CJ-3 shield/visor gets dirty or scratched, stop using it immediately. Remove the shield/visor and clean or replace it. The coating effect of mirrored shields/visors may deteriorate more easily depending on the usage conditions. When cleaning, gently wash them with pure water only.
3. The CJ-3 shield/visor should be cleaned with a solution of mild, neutral soap and water. Rinse well with pure water then wipe dry with a soft cloth. **Do not use any of the following cleaning materials: hot**

water over 40°C; salt water; any acidic or alkali detergent; benzene, thinner, gasoline, or other organic solvents; glass cleaner; or any cleaner containing organic solvents. If any of these cleaners are used, the shield's/visor's chemical nature may be altered and safety may be hindered.

4. Do not ride with a shield/visor that is fogged. This may obstruct your view and can be very dangerous. If the CJ-3 shield/visor is fogged, open the shield/visor to circulate air within the helmet and remove the fog from the shield/visor.
5. Do not place any sticker or tape in the shield's/visor's field of vision.